



Whirlpool® 31-inch Wide All Refrigerator with LED Lighting - 18 cu. ft.

WRR56X18FW

Available Finishes/Colours

WRR56X18FW
White

You'll have plenty of room to store all your favorites inside this 18 cu. ft. ENERGY STAR® certified all refrigerator. Choose the ideal temperature for whatever foods you're storing with convenient electronic temperature controls and humidity-controlled crispers.



Top Features

ENERGY Star® Qualified

LED Interior Lighting

Electronic Temperature Controls

Manuals & Literature:

 [Dimension Guide](#)  [Energy Guide](#)

 [Owner Manual](#)  [Warranty Information](#)

Dimensions		Electrical	
Depth	30.0	Volts	115
Height	66.75		
Width	30.25		

Compatibility

Connectivity	
Works With	

Controls

Control Location	Interior Up Front
Control Type	Electronic
Control Lockout	No
Door Ajar Open Alarm	No
Max Cool Fast Cool	No
Water Filter Indicator Reset	No

Exterior	
Handle Color	White
Handle Material	Plastic
Handle Type	Reach-Through Handle
Cabinet Color	White
Cabinet Finish	Textured
Door Finish	Smooth
Door Opening	Right Swing
Door Style	Contour
Hidden Hinge	Yes
Number Of Doors	1
Reversible Door	Yes

Electrical

Amps	15
------	----

AHAM Volumes And Shelf Area

Refrigerator Volume Cu Ft	17.78
---------------------------	-------

PRODUCT MODEL NUMBERS

 
WRF57R18D WSR57R18D
WRR56X18F

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

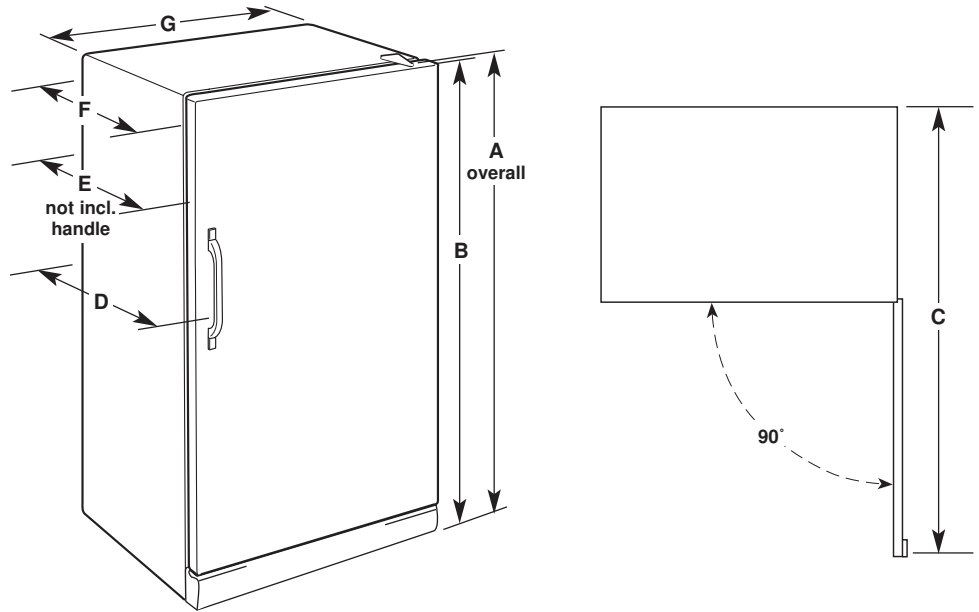

Model Number	Model Size	Door Swing	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66 ³ / ₈ " (169.5 cm)	66 ¹ / ₂ " (168.3 cm)	55 ⁷ / ₈ " (141.9 cm)	30" (76.2 cm)	29 ¹ / ₂ " (74 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₂ " (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66 ³ / ₈ " (169.5 cm)	66 ¹ / ₂ " (168.3 cm)	55 ³ / ₈ " (141.6 cm)	31 ¹ / ₂ " (79.4 cm)	28 ⁷ / ₈ " (73.3 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₂ " (76.8 cm)

 LOCATION REQUIREMENTS

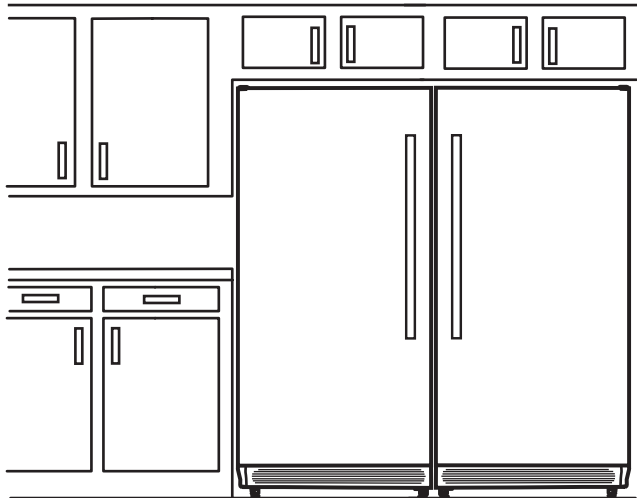

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a 1/4" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasoline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.