alinefurniture@sasktel.net - (306) 682-2154



You'll have plenty of room to store all your everyday favorites inside this 18 cu. ft. SideKicks® refrigerator. Enjoy a longer-lasting, energy-efficient light on your food with LED lighting. The temperature alarm will notify you if the SideKicks® refrigerator gets too warm. Plus, you can choose the ideal temperature for whatever foods you're storing with electronic temperature controls.

Top Features LED Interior Lighting Electronic Temperature Controls Temperature Alarm

Manuals & Literature:

Dimension Guide 🙆 Energy Guide





Whirlpool® 31-inch Wide SideKicks® All-Refrigerator with LED Lighting - 18 cu. ft.

WSR57R18DM

Amps

Available Finishes/Colours

Available 1 misnes/coloai						
WSR57R18DM Monochromatic Stainl Steel	WSR57R18DH White Ice					
Dimensions		Electrical				
Depth	31.25	Volts		115		
Height	66.75					
Width	Width 30.25		Exterior			
		Handle Color		Brushed Aluminum		
Compatibility		Handle Mater	rial	Metal		
Connectivity Works With		Handle Type		Reach- Through Handle		
Controls		Cabinet Color	r	Grey		
Control Location	Interior Up Front	Cabinet Finis	h	Smooth		
		Door Finish		Smooth		
Control Type	Electronic	Door Opening	Door Opening			
Control Lockout	No	Door Style	Door Style			
Door Ajar Open Alarm	No	Hidden Hinge				
Max Cool Fast Cool	No		Number Of Doors			
Water Filter Indicator Reset	No		Reversible Door			
Electrical		AHAM Volum	nes And Shel	f Δrea		
Liectrical		P. C.	inco And Onci			

Refrigerator Volume Cu Ft 17.7





All Refrigerator

PRODUCT MODEL NUMBERS


WRF57R18D WRR56X18F WSR57R18D

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

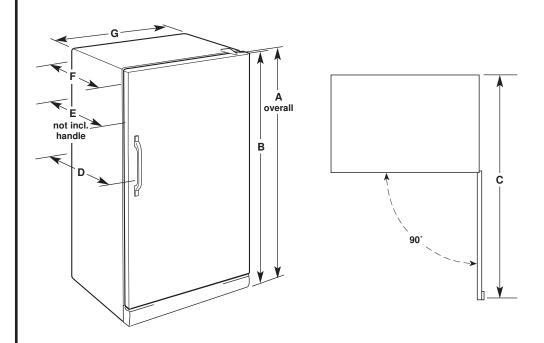

Model Number	Model Size	Door Swing	Height - Overall "A"		Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66 ³ /" (169.5 cm)	66 ¹ /" (168.3 cm)	55 ⁷ /" (141.9 cm)	30" (76.2 cm)	29 ¹ /" (74 cm)	24 ⁵ /" (62.5 cm)	30 ¹ /" (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66 ³ /" (169.5 cm)	66 ¹ /" (168.3 cm)	55 ³ /" (141.6 cm)	31 ¹ /" (79.4 cm)	28 ⁷ /" (73.3 cm)	24 ⁵ /" (62.5 cm)	30 ¹ /" (76.8 cm)

LOCATION REQUIREMENTS

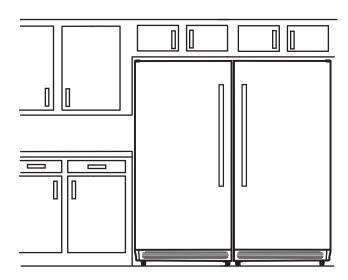

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a ¼" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasolline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.